



 



 

 

Mitel MiVoice 5320e IP Phone

Quick Reference Guide

Quick Reference Guide

 

MiVoice 5320e IP Phone



 
- | | | | |
|---|--|---|---------------------|
| 1 | Display |  | Speaker |
| 2 | Ring/Message Indicator |  | Mute |
| 3 | Volume, Speaker and Mute Controls |  | Menu |
| 4 | Fixed Function Keys |  | Cancel |
| 5 | Dial Pad |  | Redial |
| 6 | Navigation Page Keys |  | Hold |
| 7 | Programmable Feature Keys and Softkeys |  | Transfer/Conference |
| 8 | Speaker |  | Message |
| 9 | Handset | | |

Note: For more information about using other features and applications on your 5320e IP Phone, refer to *5320e IP Phone User Guide* located at www.mitel.com, or contact your Administrator.


Make a Call

- Lift the handset OR
- Press .
- Dial the number OR
- Press a **Speed Call** key OR
- Press  OR
- Dial the prefix for external calls (e.g. 9) and the number.

 
Answer a Call

- Lift the handset OR
- Press , and begin speaking.

 
End a Call

- Press  OR
- Replace the handset.


Place a Call on Hold

- Press . The line key flashes.
- Replace the handset if necessary.


Retrieve a Call from Hold

- Lift the handset OR
- Press .
- Press the flashing line key.



Retrieve a Message

- Press . It flashes when a message is waiting. Follow the voice mail prompts to retrieve your message.


Transfer a Call

- Press .
- Dial the number. Wait for an answer.
- Hang up OR announce the transfer and then hang up.

Conference a Call




- Press .
- Dial the number. Wait for an answer.
- Press .

Program a Speed Call

- Press **Menu** OR .
Press **Settings**.
Press **Programmable Keys**.
Press the key you wish to program.
Press **Speed Call**.
Press **Edit Info** and enter the label for the Speed Call.
Press **Save**.
Press **Edit Number** and enter the phone number for the Speed Call.
Press **Save**, and then press **Save** again.
Press **Close** and then press **Close** again.

Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust handset or speaker volume while using the handset or speaker.

- Press  repeatedly to raise the volume OR  repeatedly to lower the volume.
- Press  to mute your microphone.